 


Hi!

Let's get started.

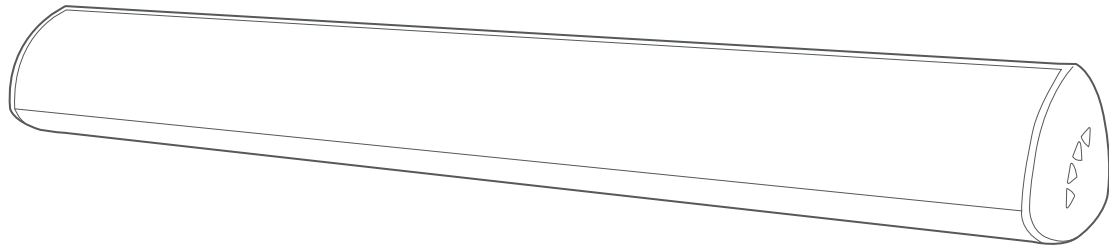

Important Safety Instructions

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.



12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Special note: When placing your unit on a lacquered or natural finish, protect your furniture with a cloth or other protective material.

FCC Warnings

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Additional Warnings

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.

L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.

Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.

Caution marking is located at the rear or bottom of the apparatus.

Attention marquage est situé sur le panneau arrière ou inférieur de l'unité.

The marking information is located at the rear or bottom of apparatus.

Le marquage est situé sur le panneau arrière ou inférieur de l'unité.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

What's in the box



Sound Bar



 
Remote control



User's guide



Stereo RCA to
3.5mm audio cable

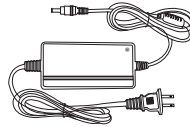

Power adapter



Wall mount brackets



 
 
Mount screws



Wall mount template

Controls and connections

Back of Sound Bar

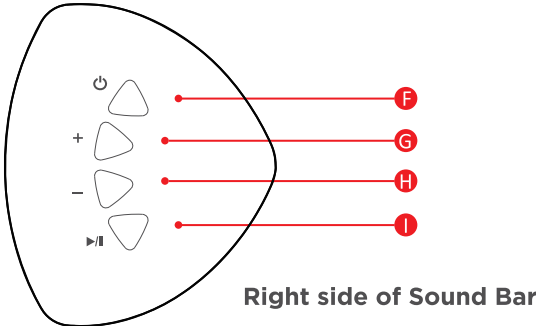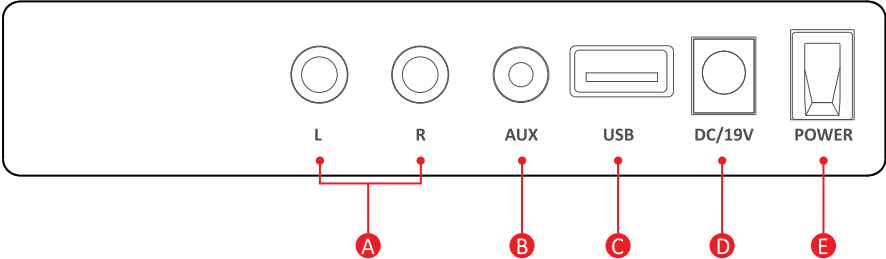


Back of Sound Bar

- A** **[L/R]** Analog Audio In(Stereo 3.5mm)
- B** **[AUX]** Analog Audio In(Stereo RCA)
- C** **[USB]** USB In
- D** **[DC/19V]** Power Port
- E** **[POWER]** On/Off Power Button
- F** Press to turn on/change the audio source; Press and hold it to turn off
- G** Press to next track; Press and hold it to increase the loudness of audio
- H** Press to previous track; Press and hold it to decrease the loudness of audio
- I** Press to play or pause when playing

Ready for the step by step?

Step 1. Connect your Sound bar and TV

 
Back of Sound Bar

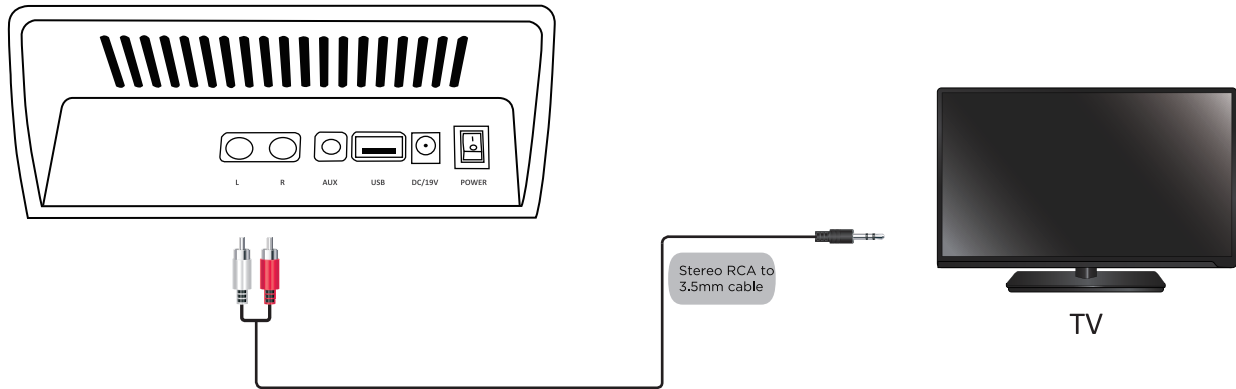

- Connect one end to the back of Sound Bar, the other end to your TV's 3.5mm audio output.
- Setting your TV output to PCM if no sound.

Step 2. Power on your Sound Bar

 Power on your Sound Bar with the included power adapter as below:

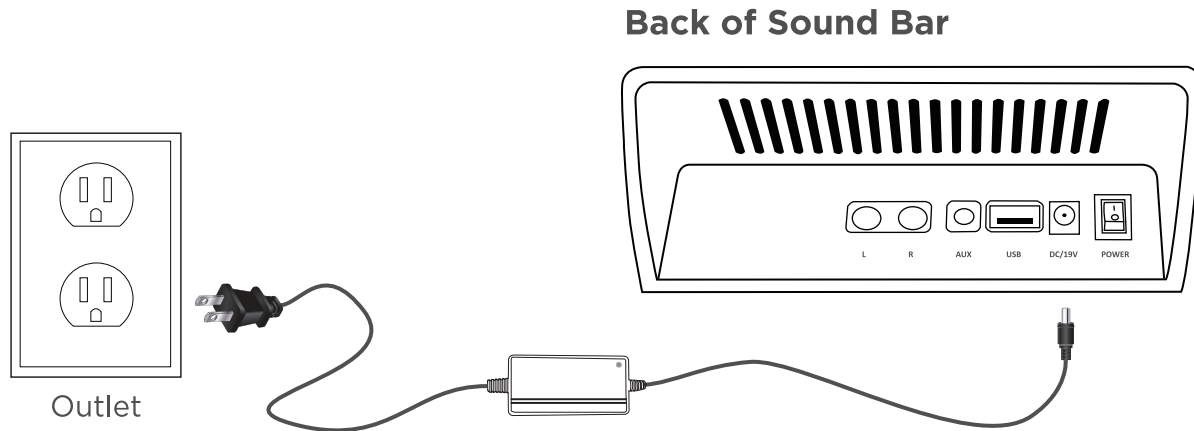

- Plug the power adapter into an electrical outlet.

Step 3. Position the Sound Bar


Position your Sound Bar on your TV cabinet or mount it on the wall as shown.




Leave 6.5 feet at least between your Sound Bar and sofa.



 - Sitting on the sofa which is centered to your Sound Bar.

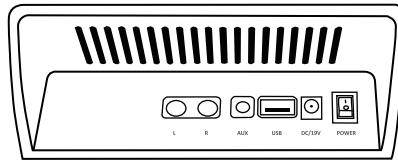

 
3.5mm cable

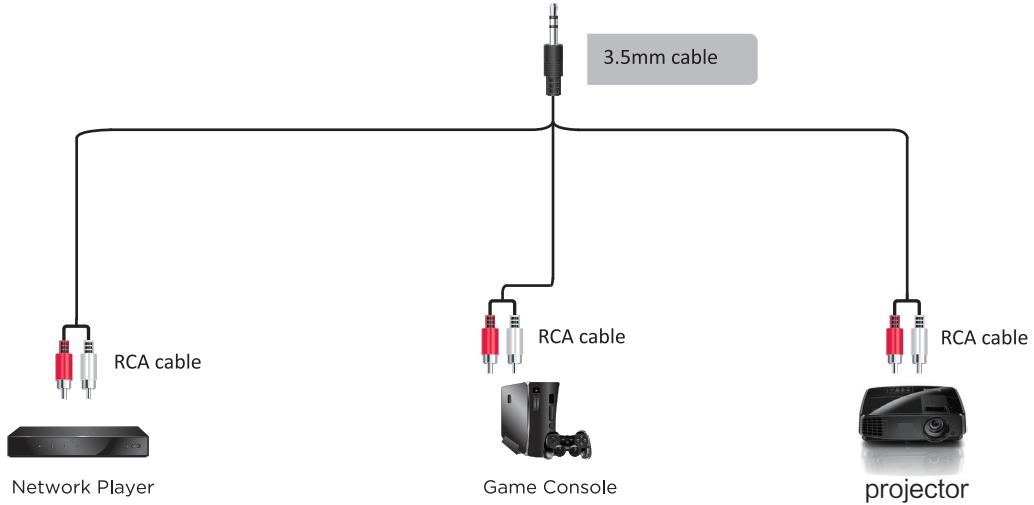

Network Player

Game Console

 projector

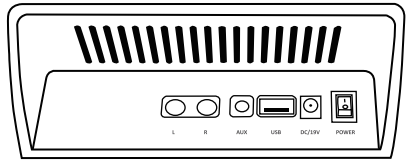

RCA cable



3.5mm cable



Laptop



3.5mm cable



Mobile



3.5mm cable



 
MP3 Player



3.5mm cable



Tablet

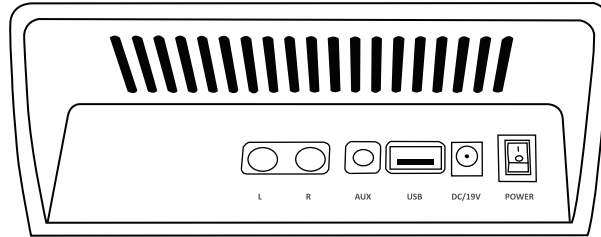


USB Drive

You may receive any one of the following remote controls, please use the material object as standard.


Know your remote:

Power the by inserting batteries(Type A: 1 pc of CR2025, Type B: 2 pcs of AAA Batteries)

 A

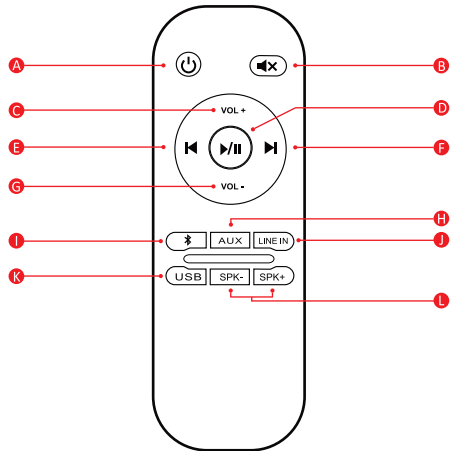

B

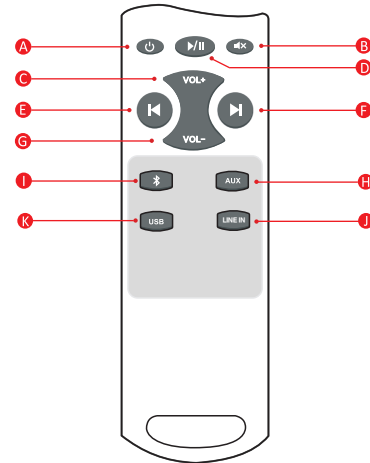 

Battery Handling Methods

There is an insulating sheet on the CR2025 battery(install-b), please remove it when you start to use this remote.



A **[POWER]** Power on/Standby

B **[MUTE]** Mute/Unmute

C **[VOL+]** Volume +

D **[Play/Pause]** Play/Pause

E **[PREV]** Previous Track

F **[NEXT]** Next Track

G **[VOL-]** Volume -

H **[AUX]** AUX Stereo 3.5mm

I **[Bluetooth]** Bluetooth mode

J **[LINE IN]** AUX Stereo RCA

 
K **[USB]** USB In

L **[SPK-/+]** Volume +/-

- The default audio source is Bluetooth mode, please wait 3 seconds and then change to other sources.
- You can't use USB In mode if there is no USB drive being inserted.

Bluetooth pairing


1. Press the Bluetooth button on the remote, when the Sound Bar is in Bluetooth Pairing mode, the LED indicator will flash blue quickly.
2. Now you can search for the (TV Sound Bar) in your Bluetooth device, connect it. Once your device is paired, the LED indicator will flash blue slowly.
3. Play audio in your Bluetooth device, volume and audio can be controlled by your device and the Sound Bar.
4. Once your source device has paired to Sound Bar, your device should auto-paired even if you reboot Sound Bar and Source device.

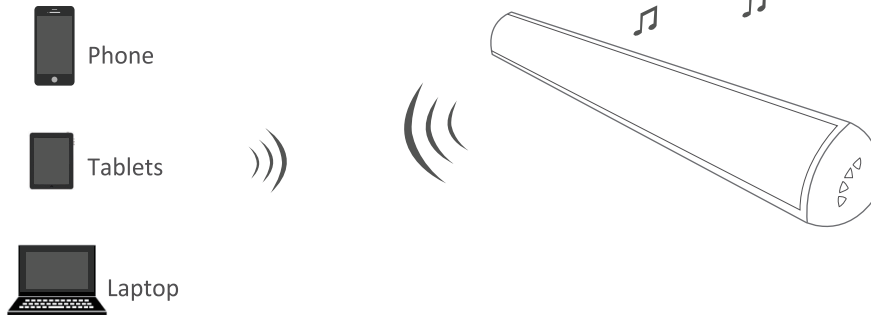

- This Sound Bar is not equipped with hands-free function.

Additional Bluetooth information

 
1. If you hear any break-up while streaming music from your device, move closer to your Sound Bar.
2. Bluetooth signal has a range of up to 40 feet if there are no solid obstructions between your Sound Bar and source device.
3. Other wireless devices may interfere with Bluetooth range, including wireless video monitors, cordless phones, wireless cameras, etc., moving or turning off these devices may improve Bluetooth range.

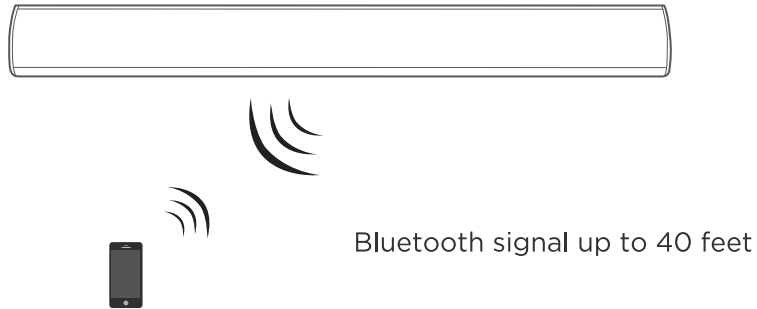

- Reduce the volume on your device or Sound Bar, high volume can damage your hearing.

Indicator light explanations

 The LED Indicators will behave differently with each button on the remote control.

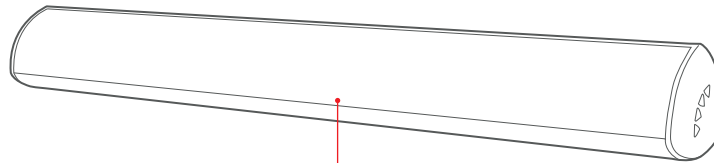

LED Indicators



Standby



Bluetooth



USB In



Stereo RCA





Stereo 3.5mm

Wall mounting

Place the wall mounting template against the wall under your TV, using a pencil to mark the eight bracket holes.

  Remove the wall mounting template, using the included screws to attach the brackets to the wall. Be sure your screws are attached to wood studs, drywall, or concrete anchors. (for brick/concrete walls)

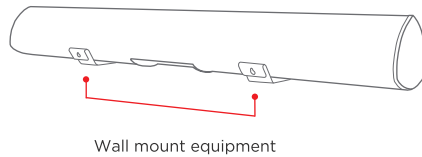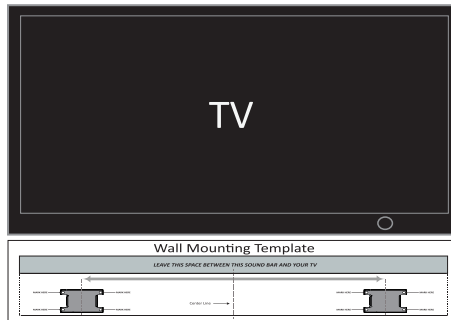

Consult a professional installer if you are unfamiliar with power tools or the layout of electrical wiring in the walls of your home.

Troubleshooting

If you have a problem with your Sound Bar, there is quick simple solution, first make sure following:

- The cables between Sound Bar and input devices are securely connected, the power adapter also connected to a working power source.
- Power switch on the back is turned on and LED indicator is lighting on the front.

No sound

- Check if all cables connected properly.
- Press Mute on the remote to ensure the Sound Bar is not muted.
- Press Volume+ on the remote or the right side of your Sound Bar.
- Make sure you have selected the right input source on your remote, and the LED is lighting accordingly.
- If using Bluetooth, check if the sound on your device is under minium volume.

Remote isn't working

- Check if the battery is installed properly with power.
- Check if the signal of the receiver is covered by something.

Bluetooth can't be connected

- Check if the Sound Bar is connected with the third Bluetooth device.
- Be sure that there are no solid obstructions between the Sound Bar and source device.(within 40 feet)

Thank you for reading!